
EN

ECODESIGN LEAFLET - 2021

The intent of this document is to provide a list of suggestions that can help to optimize the energy performance and usage of the appliance.

This refrigerating appliance is not intended to be used as a built-in appliance.

The model information can be retrieved using the QR-Code indicated on the energy label.

The label also includes the model identifier that can be used to consult the <https://eprel.ec.europa.eu> database portal.

The quantity of fresh food that can be frozen in a specific time period is indicated on the rating plate.

APPLIANCE DEFROSTING

1. It is advisable to set the temperature colder or turn on the Fast Freeze at least four hours before removing the food from the freezer compartment, to prolong the preservation of the food during the defrosting phase.
2. To defrost, unplug the appliance. Leave the door open to allow the frost to melt. To prevent the water from escaping during the defrost, it is advised that you place an absorbent cloth on the bottom of the freezer compartment and wring it out regularly.
3. Clean the inside of the freezer compartment and dry it carefully.
4. Turn the appliance back on and put the food back inside.

Key lock is used to prevent children from being locked inside (if present).

Doors and lids of the refrigeration appliance should be removed before disposal in the landfill, to avoid children or animals getting trapped inside.

This product contains a light source of energy efficiency class F (if present).

Policies, standard documentation, ordering of spare parts and additional product information can be found by visiting our website docs.whirlpool.eu and parts-selfservice.whirlpool.com

